



DE	Gebrauchsanweisung Reiskocher mit Lunch-to-go-Box	4	RO	Manual de utilizare Rice Cooker with to-go lunch-box	46
PL	Instrukcje obsługi Rice Cooker with to-go lunch-box	14	BG	Ръководство за употреба Rice Cooker with to-go lunch-box	54
CZ	Návod k obsluze Rice Cooker with to-go lunch-box	22	HR	Uputa za uporabu Rice Cooker with to-go lunch-box	62
SK	Návod na používanie Rice Cooker with to-go lunch-box	30	SL	Navodila za uporabo Rice Cooker with to-go lunch-box	70
HU	Használati utasítás Rice Cooker with to-go lunch-box	38			



Aufbau

1. Glasdeckel
2. Deckel „to go“
3. Garaufsatz
4. Gartopf, antihaftbeschichtet
5. Heizgerät
6. Bedienfeld
7. Reislöffel
8. Messbecher
9. Stromkabel

Struktura

1. Steklen pokrov
2. Pokrov za prenos
3. Nastavek za kuhanje
4. Kuhalna posoda s premazom proti prijemanju
5. Grelna enota
6. Nadzorna plošča
7. Žlica za riž
8. Merilna skodelica
9. Napajalni kabel

Layout (PL)

Layout (CZ)

Layout (SK)

Layout (HU)

Layout (RO)

Layout (BG)

Layout (HR)

Layout (SL)